

FIG. 2. OPEN TANK FOR BUTT TREATMENT. (DIAGRAMMATIC ONLY.)

A fire-trench in the ground can be used in place of the brickwork, as described in the text.

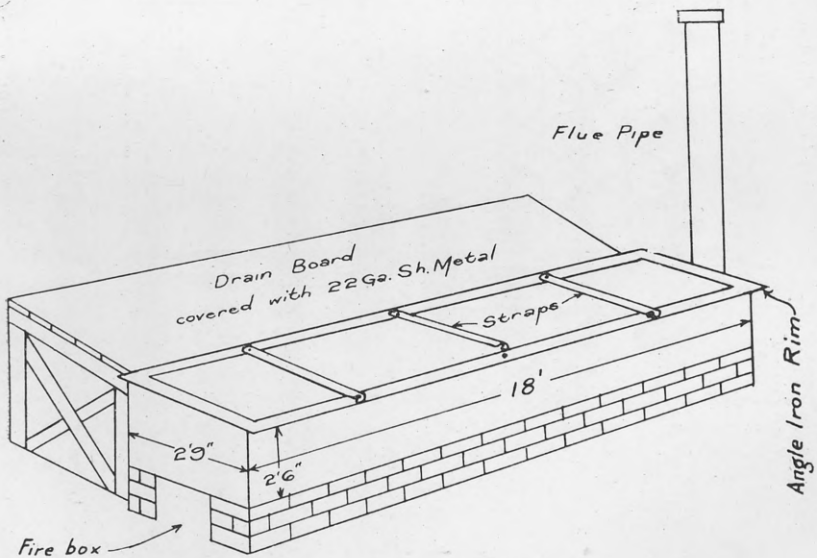


FIG. 3. LONG OPEN TANK FOR FULL-LENGTH TREATMENT. (DIAGRAMMATIC ONLY.)